

Connecting and using the Kaon
Kacf S660HD Wireless SD/HD Digital Set-Top Box
The Capitol Connection–Business Television
(703) 993-3100

Your new **Set-Top Box** is more like a computer than a VCR. Like any piece of complex electronics it may take you a little while to get used to the **Box** and its **Remote Control**.

- 1. Put the Supplied Batteries in the Remote and put TV on Channel 3.**
- 2. Connect the Set-Top Box to your TV and VCR (if available).**
 - a. Connect the Antenna lead from the wall to the **ANTENNA** connection on the back of the **Set-Top Box** on the upper left-hand side.
 - b. Run a lead from the **RF OUT** connector of the **Box** to the **Antenna Input** connection on the back of your TV.
 - c. If you have a **VCR**, connect the cable lead from the **RF OUT** connector of the **Set-Top Box** to the **ANT IN** connector of the **VCR**. Run another cable lead from the **VCR**'s **OUT** or "**TO TV**" connector to your TV's **ANT** connector. Put both units on **Channel 3** and **tune the channels through the Set-Top Box**. *Unfortunately, you cannot watch one channel on the TV and record another on your VCR.*
- 3. Plug the Set-Top Box into an A/C power outlet.**
- 4. Turning the Set-Top Box ON and OFF.**
 - a. Enable the **Set-Top Box** by pressing the "I" of the **ON/OFF switch** on the rear of the box just to the left of where the power cord enters the **BOX**.
 - b. The **ON/OFF** switch on the **Remote** is marked **STB** (for Set-Top Box) and is located on the top right-hand side of the **Remote**. **PUSH** and **HOLD the STB Button for two seconds** to turn on the **Box**. The **TV Button** on the left-hand side is used if you want to turn your TV on or off and adjust its volume, etc. Consult the Manual that came with your **Box** for the codes and how to program the **Remote** with a code that will operate your TV. To turn **Off** the **Box**, **Push** and **Hold** the **STB** button for two seconds. You can also turn the **Box** on and off using the **Standby** Button on the far left side of the **Box's** front panel.
- 5. If you have set up your Remote to also operate your TV, a quick push of the STB or TV button (don't hold either down long) will switch your Remote back and forth to control your TV or the Set-Top Box.**

6. Select Channels to Watch through the Set-Top Box.

The black number buttons near the top of your **Remote** can be used to select **The Capitol Connection Channels**. Just push buttons **1 through 9**. The Channel will change more quickly if you immediately **press the OK button** in the center of the circle of buttons **after choosing a channel number**.

To select a local channel between Channel 2 and Channel 9, you need to scroll above The Capitol Connection channels*, or scroll down to them from Channel 14 using either the top or bottom semicircular buttons above and below the **OK** button, or the Ch ^ or Ch v buttons below and to the right of the circle of buttons surrounding the **OK** button.

The number buttons can also be used to select any local channel 14 or higher. But because they are used to select one of The Capitol Connection's 9 channels, they cannot be used to select any local channel between Channel 2 and Channel 9.

*Local Channel 4 is located above Capitol Connection Channel 9.

7. Other Useful Buttons on Your Remote.

As you get more familiar with your **Set-Top Box** and its **Remote** you'll discover other buttons that you can use to resize the picture (**p-size**), play around with captioning (**cc**), and other fun things. **Enjoy!**

Capitol Connection Channel Lineup:

- 1 - C-SPAN
- 2 - CNN
- 3 - C-SPAN2
- 4 - CNBC
- 5 - Fox News
- 6 - MSNBC
- 7 - C-SPAN3
- 8 - Bloomberg
- 9 - Government Programming (Premium Programming)

Local channels are free and digital.